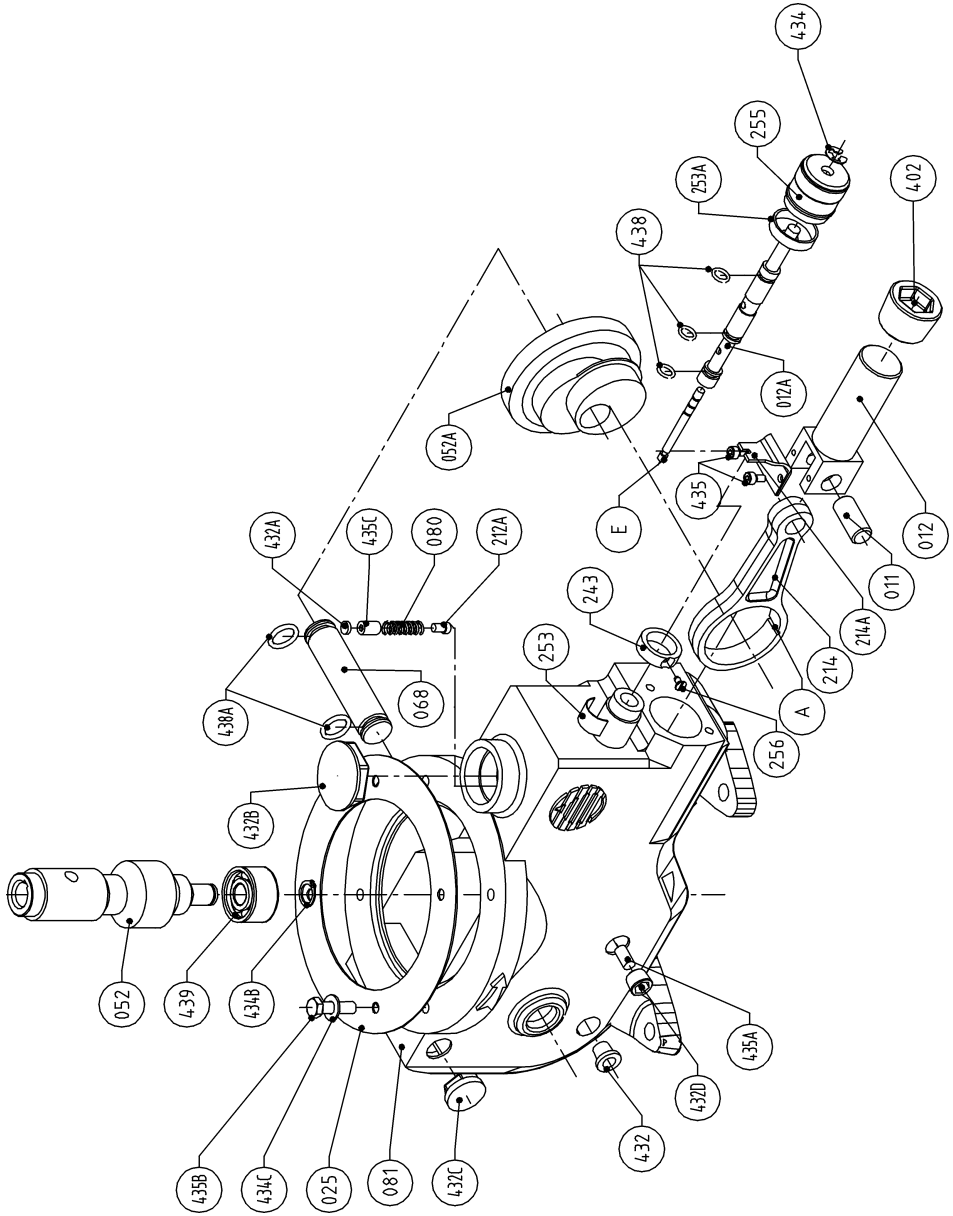

MAINTENANCE PREVENTIVE / *PREVENTIVE MAINTENANCE*

REP-LOT	QT	NB	DESIGNATION	/	*DESIGNATION*
012A-012A	1	0120065000N	CHEMISE-TIROIR	/	*CONTROL SPOOL ASSY*
434B-434B	1	4340031121N	CIRCLIPS	/	*CLIPS*
439-439	1	4390044010N	ROULEMENT ABILLES	/	*BEARING*
-A	1	3075010021F	LOT DE JOINTS	/	*SET OF SEALS*
438-A	3		JOINT TORIQUE	/	*ORING*
438A-A	2		JOINT TORIQUE	/	*ORING*
-J	1	4370013051N	HUILE HYDROMECANIQUE	/	*HYDROMECHANICAL OIL*

MAINTENANCE CORRECTIVE / *CORRECTIVE MAINTENANCE*

REP-LOT	QT	NB	DESIGNATION	/	*DESIGNATION*
012-012	1	0120100006N	PISTON	/	*PLUNGER*
052A-052A	1	2520052001N	ROUE EXCENTRIQUE	/	*ECCENTRIC WHEEL*
068-068	1	0680039006N	AXE EXCENTRIQUE	/	*ECCENTRIC SHAFT*
-B	1	3075010014F	ENSEMBLE CLAPET	/	*CHECK VALVE ASSEMBLY*
080-B	1		RESSORT DE COMPRESSION	/	*COMPRESSION SPRING*
212A-B	1		CLAPET DE SECURITE	/	*POPPET RELIEF VALVE*
432A-B	1		BOUCHON CONIQUE	/	*TAPER PLUG*
435C-B	1		VIS HC	/	*SCREW HC*
-C	1	3075010001F	ENS.DOIGT DACCROCHAGE	/	*CATCH FINGER*
214A-C	1		DOIGT ACCROCHAGE	/	*HOOKING PIN*
435-C	2		VIS CHC	/	*SCREW CHC*
-D	1	3050564130F	ENS.AXE/BIELLE	/	*PIN/CONNECTING ROD ASSY*
011-D	1		AXE DE BIELLE	/	*WIRST PIN*
214-D	1		BIELLE	/	*CONNECTING ROD*
-E	1	3050001010F	ENSEMBLE REGLAGE MANUEL	/	*HAND ADJUST ASSEMBLY*
243-E	1		CHEMISE	/	*PLUNGER CYLINDER*
253-E	1		ECHELLE DE DEBIT	/	*OUPUT SCALE*
253A-E	1		GRADUATION	/	*SCALE*
255-E	1		BOUTON DE REGAGE	/	*CONTROL KNOB*
256-E	1		VIS ARRET	/	*SCREW*
434-E	1		SEGMENT ARRET	/	*CLIPS*
-F	1	3051152010F	ENS. REDUCTION	/	*REDUCTION ASSEMBLY*
052-F	1		VIS SANS FIN	/	*WORM SCREW*
052A-F	1		ROUE EXCENTRIQUE	/	*ECCENTRIC WHEEL*
432D-F	1		BOUCHON	/	*PLUG*
434B-F	1		CIRCLIPS	/	*CLIPS*
435A-F	1		VIS SANS TETE	/	*SCREW WITHOUT HEAD*
439-F	1		ROULEMENT ABILLES	/	*BEARING*
-G	1	3075010013F	LOT DE BOUCHON	/	*SET OF PLUGS*
432-G	1		BOUCHON	/	*PLUG*
432B-G	1		BOUCHON DE REMPLISSAGE	/	*FILLING PLUG*
432C-G	1		INDICATEUR DE NIVEAU HUILE	/	*OIL LEVEL INDICATOR*
-H	1	3075010015F	ENSEMBLE CARTER DE BASE	/	*HOUSING ASSEMBLY*
012-H	1		PISTON	/	*PLUNGER*
081-H	1		CARTER	/	*HOUSING*
402-H	1		BOUCHON	/	*PLUG*
432-H	1		BOUCHON	/	*PLUG*
432B-H	1		BOUCHON DE REMPLISSAGE	/	*FILLING PLUG*
432C-H	1		INDICATEUR DE NIVEAU HUILE	/	*OIL LEVEL INDICATOR*
434A-H	2		CIRCLIPS	/	*CLIPS*
438-H	3		JOINT TORIQUE	/	*ORING*
438A-H	2		JOINT TORIQUE	/	*ORING*
-I	1	3075010020F	ENS.VIS SANS FIN	/	*WORK ASSY*
052-I	1		VIS SANS FIN	/	*WORM SCREW*
434B-I	1		CIRCLIPS	/	*CLIPS*
439-I	1		ROULEMENT ABILLES	/	*BEARING*
-K	1	3050809000F	ENSEMBLE MONTAGE MOTEUR	/	*MOTOR MOUNTING ASSEMBLY*
025-K	1		JOINT	/	*SEAL*
434C-K	4		RONDELLE	/	*WASHER*
435B-K	4		VIS A TETE HEXAGONALE	/	*SCREW H*

Propriete exclusive - Communication et reproduction interdite / *All rights reserved - Copyright DOSAPRO MILTON ROY COMPANY*